
User Manual----WICASTLE KBED530

Page I ----- Table of Content Page 2 ----- Control Panel Page 3 ----- Preparation Page 4 ----- Body Position Sequence Page 5 ----- Operation Sequence Page 6 ----- Operation Sequence Page 7 ----- Service and Maintenance Page 8 ----- Troubleshoot Page 9 ----- Safety Information

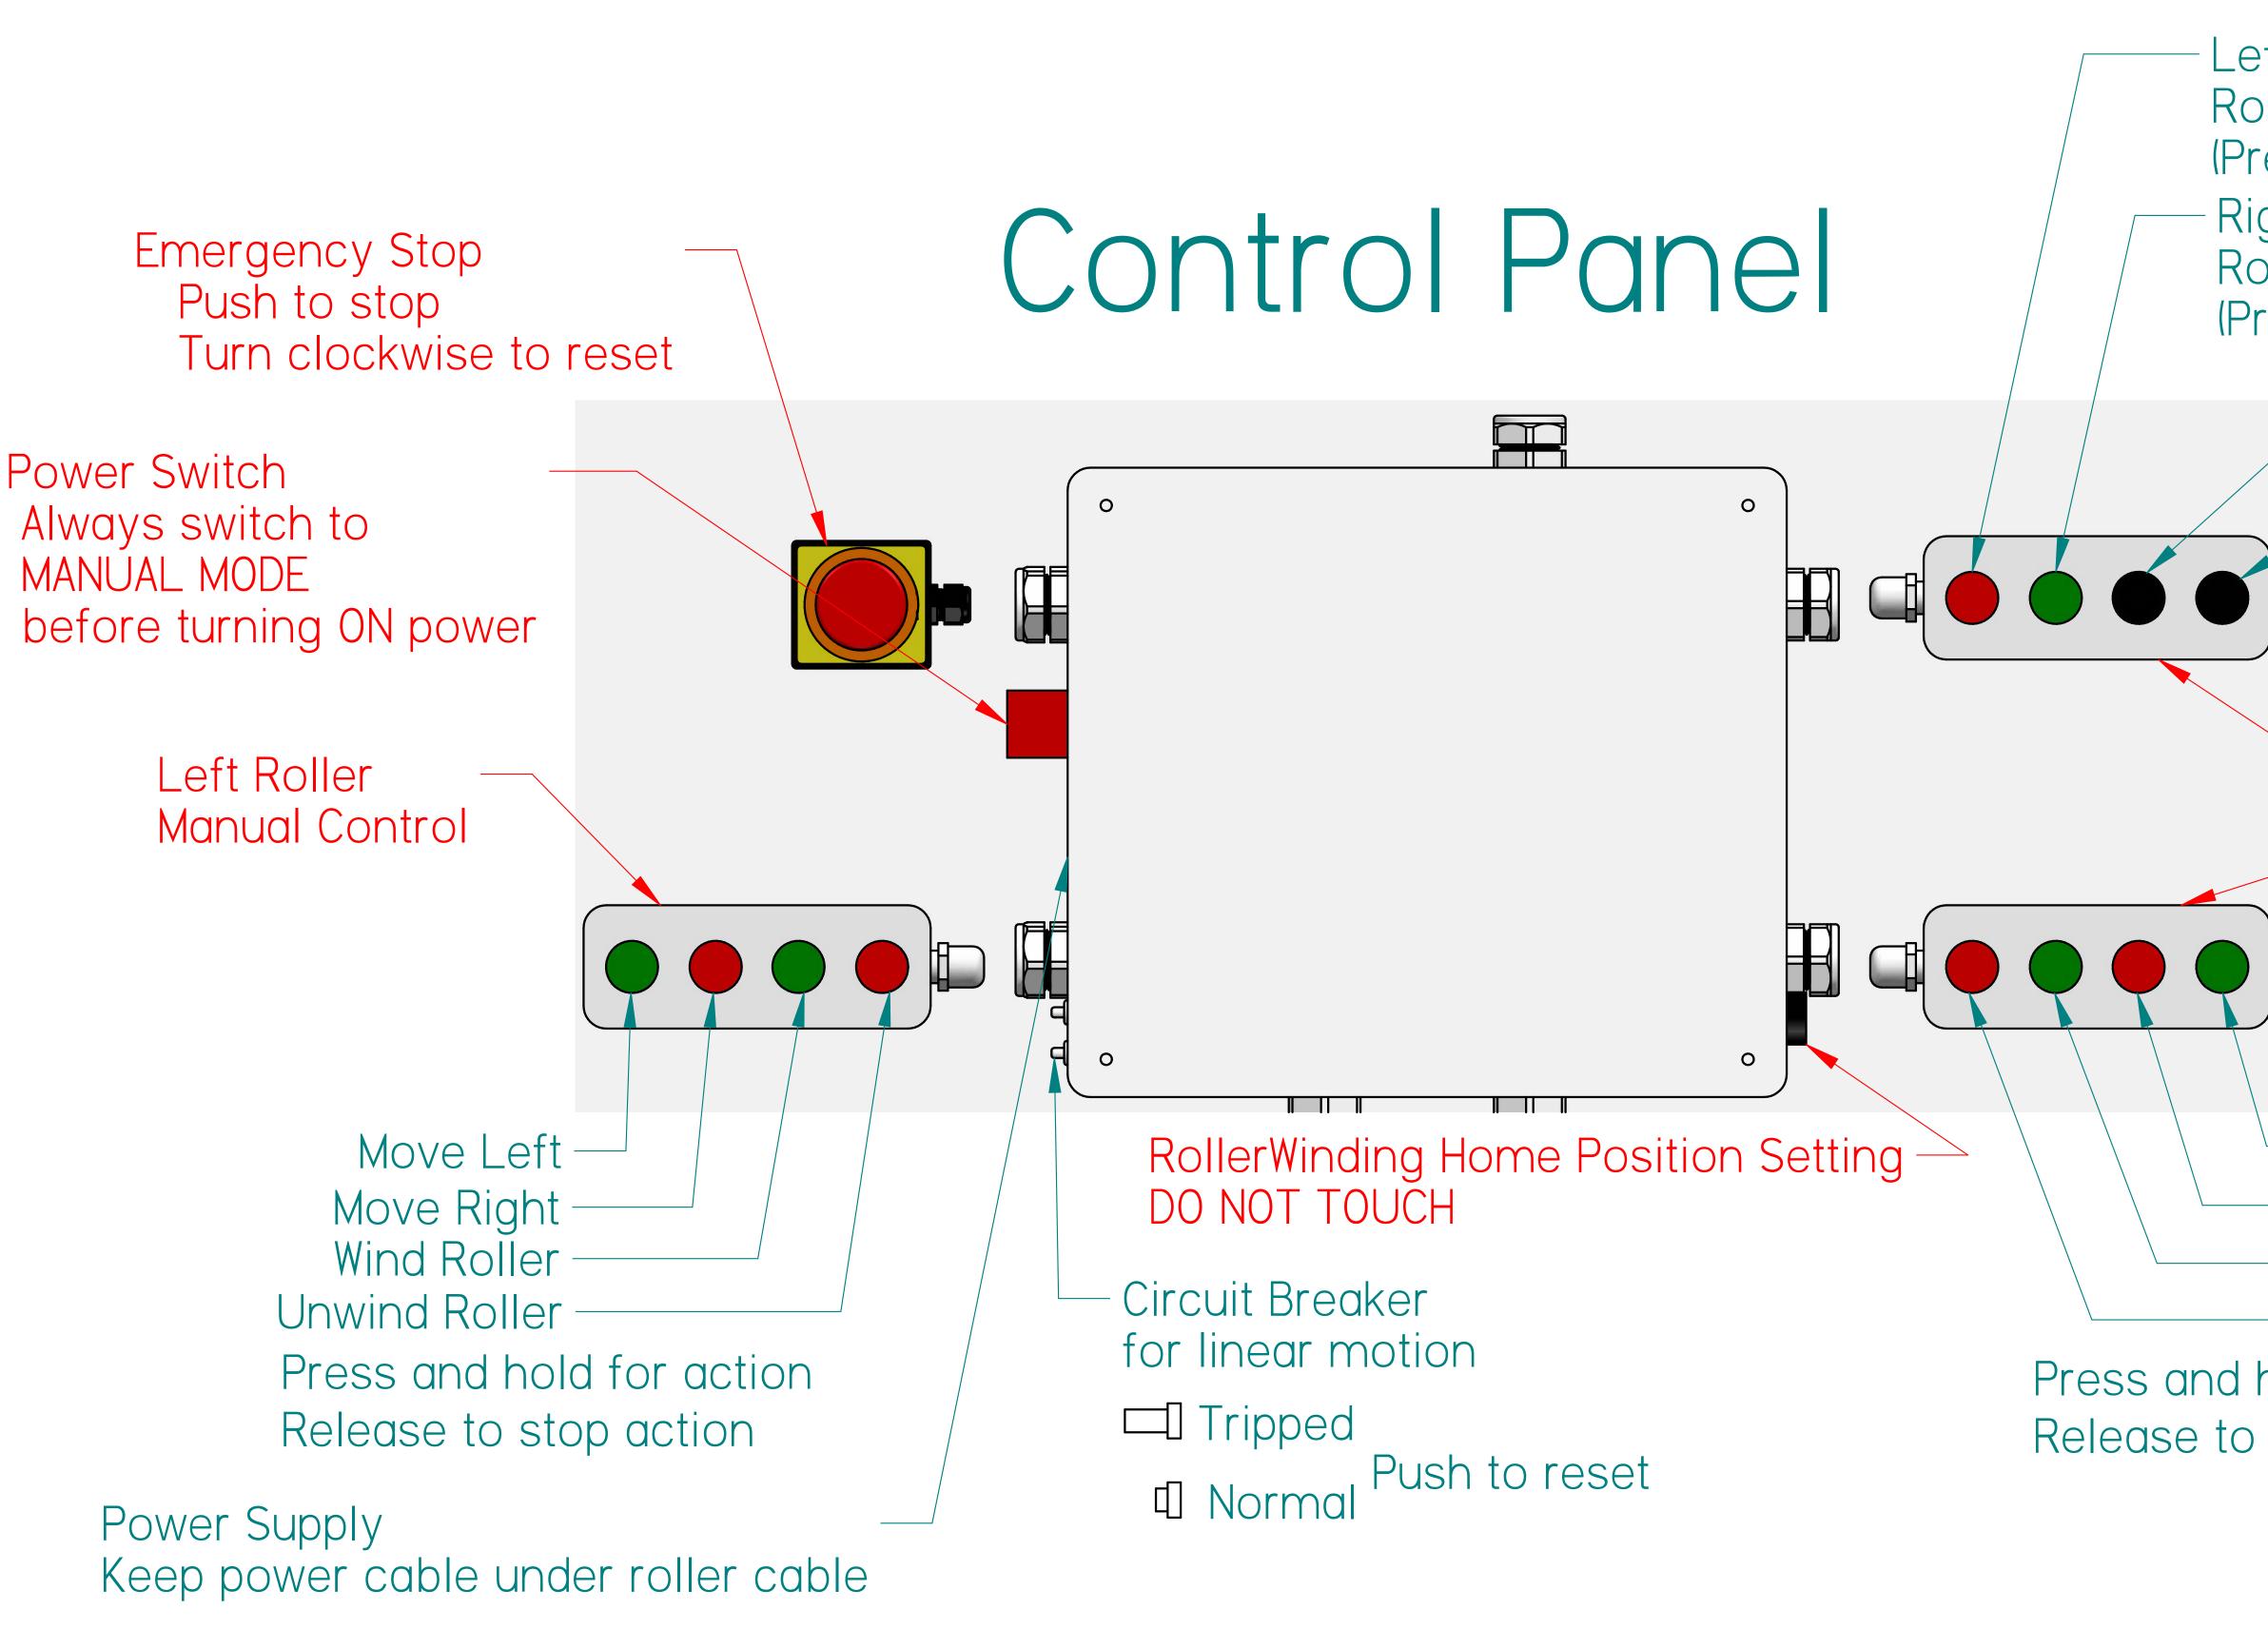

Left Roller Rolling Range Setting (Press and Hold for I second to set) Right Roller Rolling Range Setting (Press and Hold for I second to set)

Holding Time Setting Knob
IOmin – 30min
Mode Setting
Center: Manual/Setting Mode
Right: Fast Test Mode
Left: Normal Operation Mode

- Settings Control

Right Roller Manual Control

Unwind Roller Wind Roller Move Right Move Left Press and hold for action Release to stop action

- •Remove packaging of mattress

- •Do NOT use comforters
- •Wear enough clothes to keep warm •Wear adult diapers if necessary

Patient Preparation

 Attach rolling sheet to rollers, cover sheet to mattress Check for damage and loose parts on bed Turn and disengage emergency stop button


Room and Environment Preparation •Minimum 2 ft clearance all around the bed

 Remove sharp and hard items from pockets Remove feed/injection/IV tubes, catheters and cables


•Keep hair clamped or trimmed to prevent getting caught Remove shoes and all loose earings, necklace and jewelry


•Wear arm bag for sleep or arm disability during the day •Wear clothes rough enough to keep friction against rolling sheet

Body Position Sequence

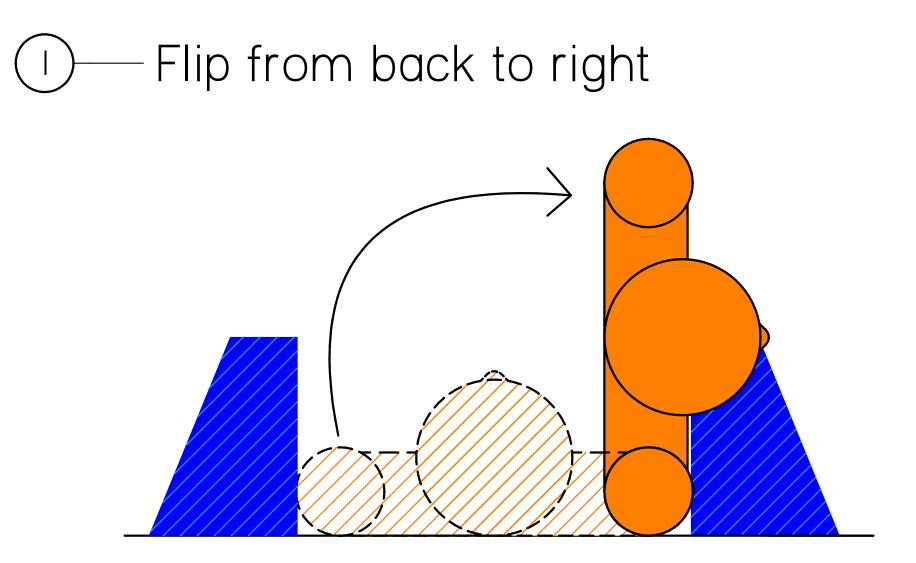


2 — Flip from right to back

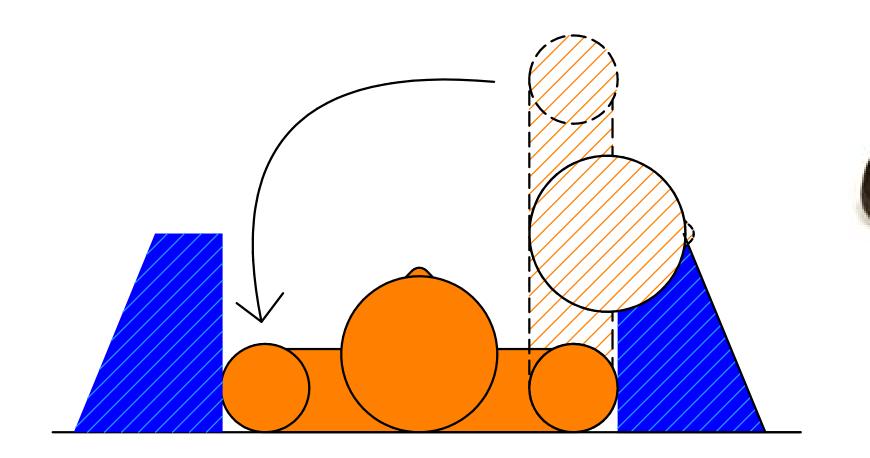


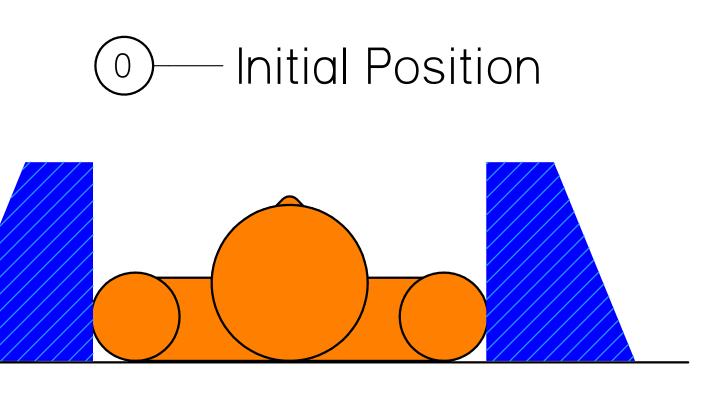

Flip from back to left (3)

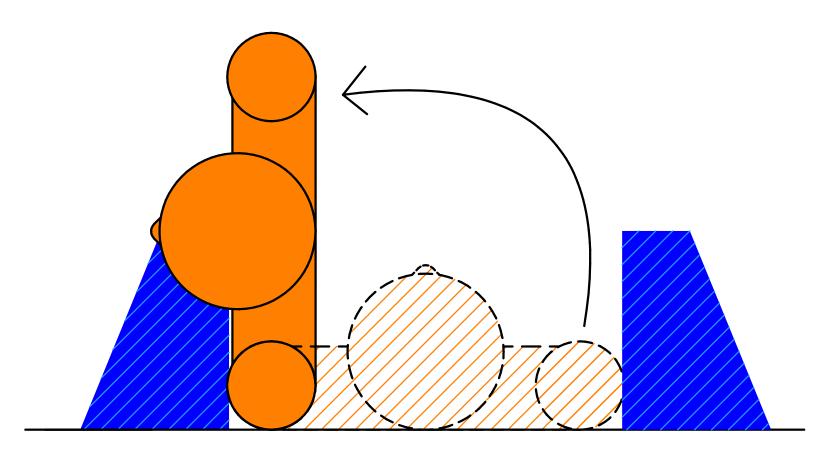

-Flip from left to back 4

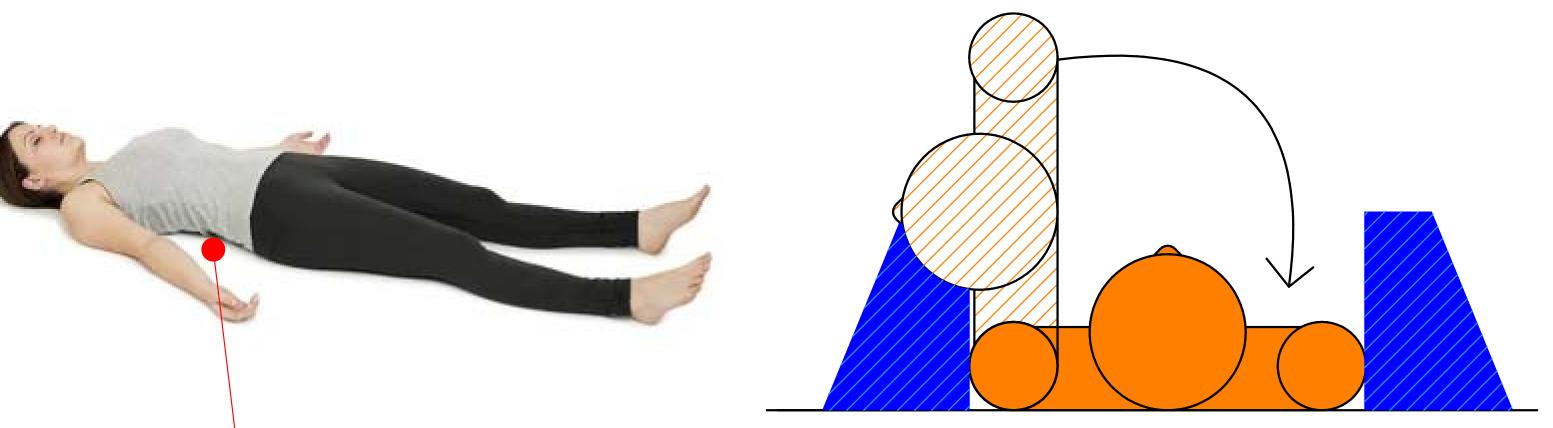


- Wear arm bag or move arm before each turn to the side to keep distance between arm and torso to keep distunce between ann and to avoid landing on the arm instead of the torso Wicastle LLC sales@wicastlellc.com





Turn mode switch to center position (manual mode) Turn ON power Unwind both rollers with manual control buttons (Rolling stops automatically at home position) 0 0000 0000 0000 - Move both rollers to upper corners 2 with manual control buttons 0 0000 0000 000 3 - Move both rollers to home position with manual control buttons (Rollers stop automatically at home position) 0 0000 000 0000 Trigger Plate -Home Switch -NERGENC Push emergency stop button for unexpected or uncontrolled motion

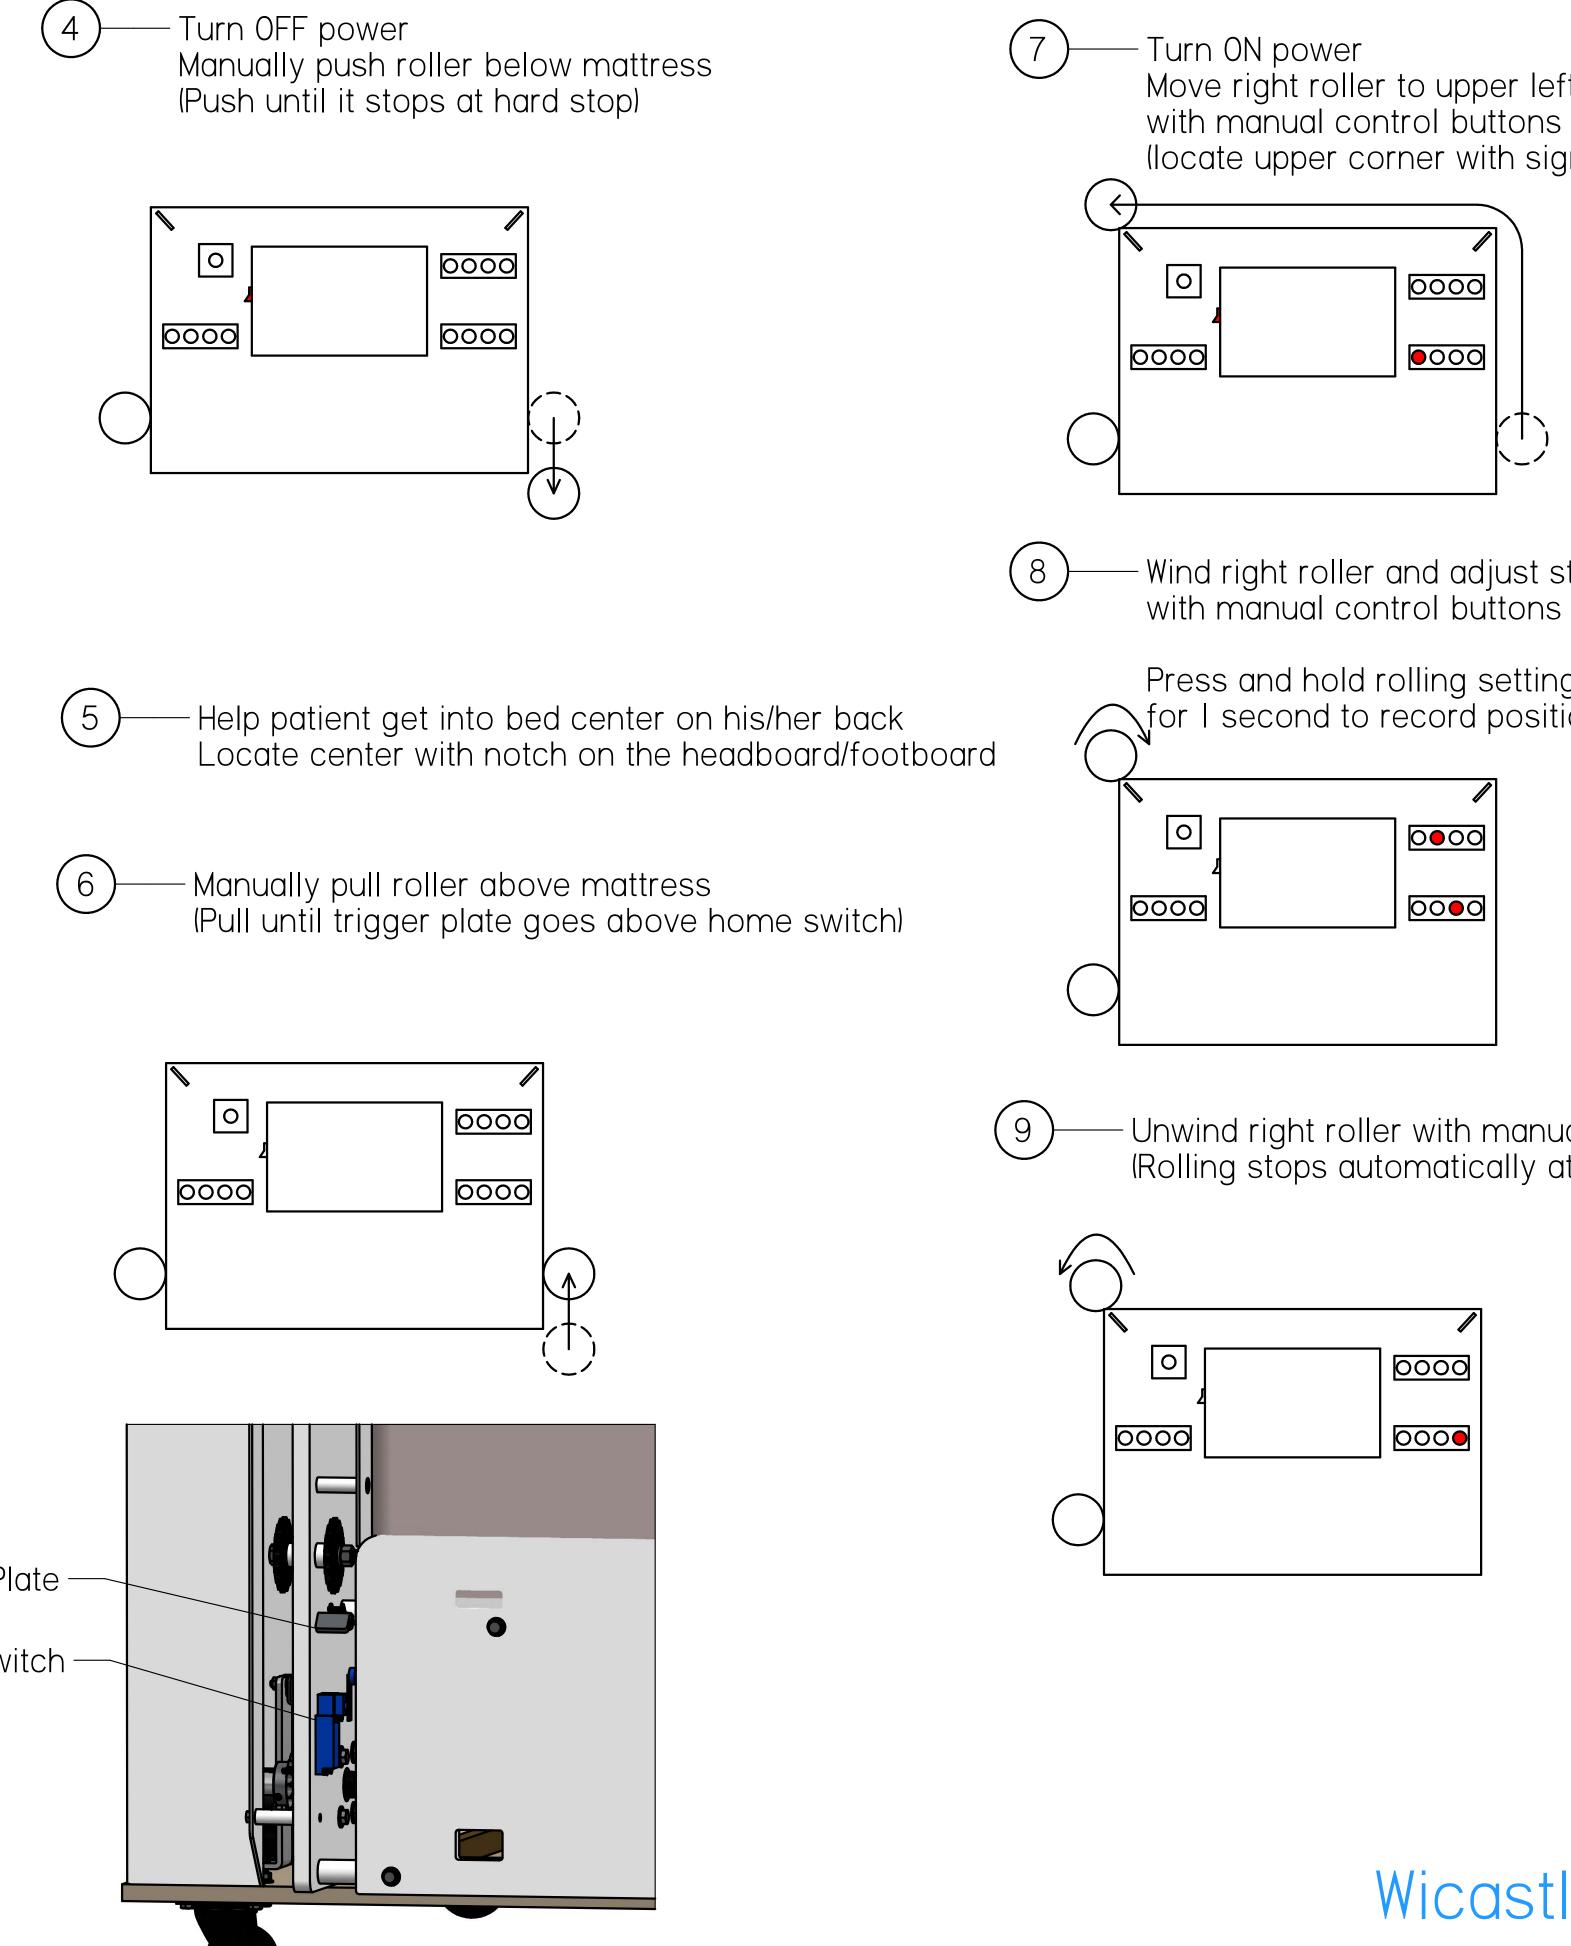


Move right roller to upper left corner (locate upper corner with signs on the housing)


- Wind right roller and adjust stop pillow for 90° rolling
- Press and hold rolling setting button for I second to record position


	/
<u>ן</u> ר	000
0	0000


- Unwind right roller with manual control buttons (Rolling stops automatically at home position)

 (10)

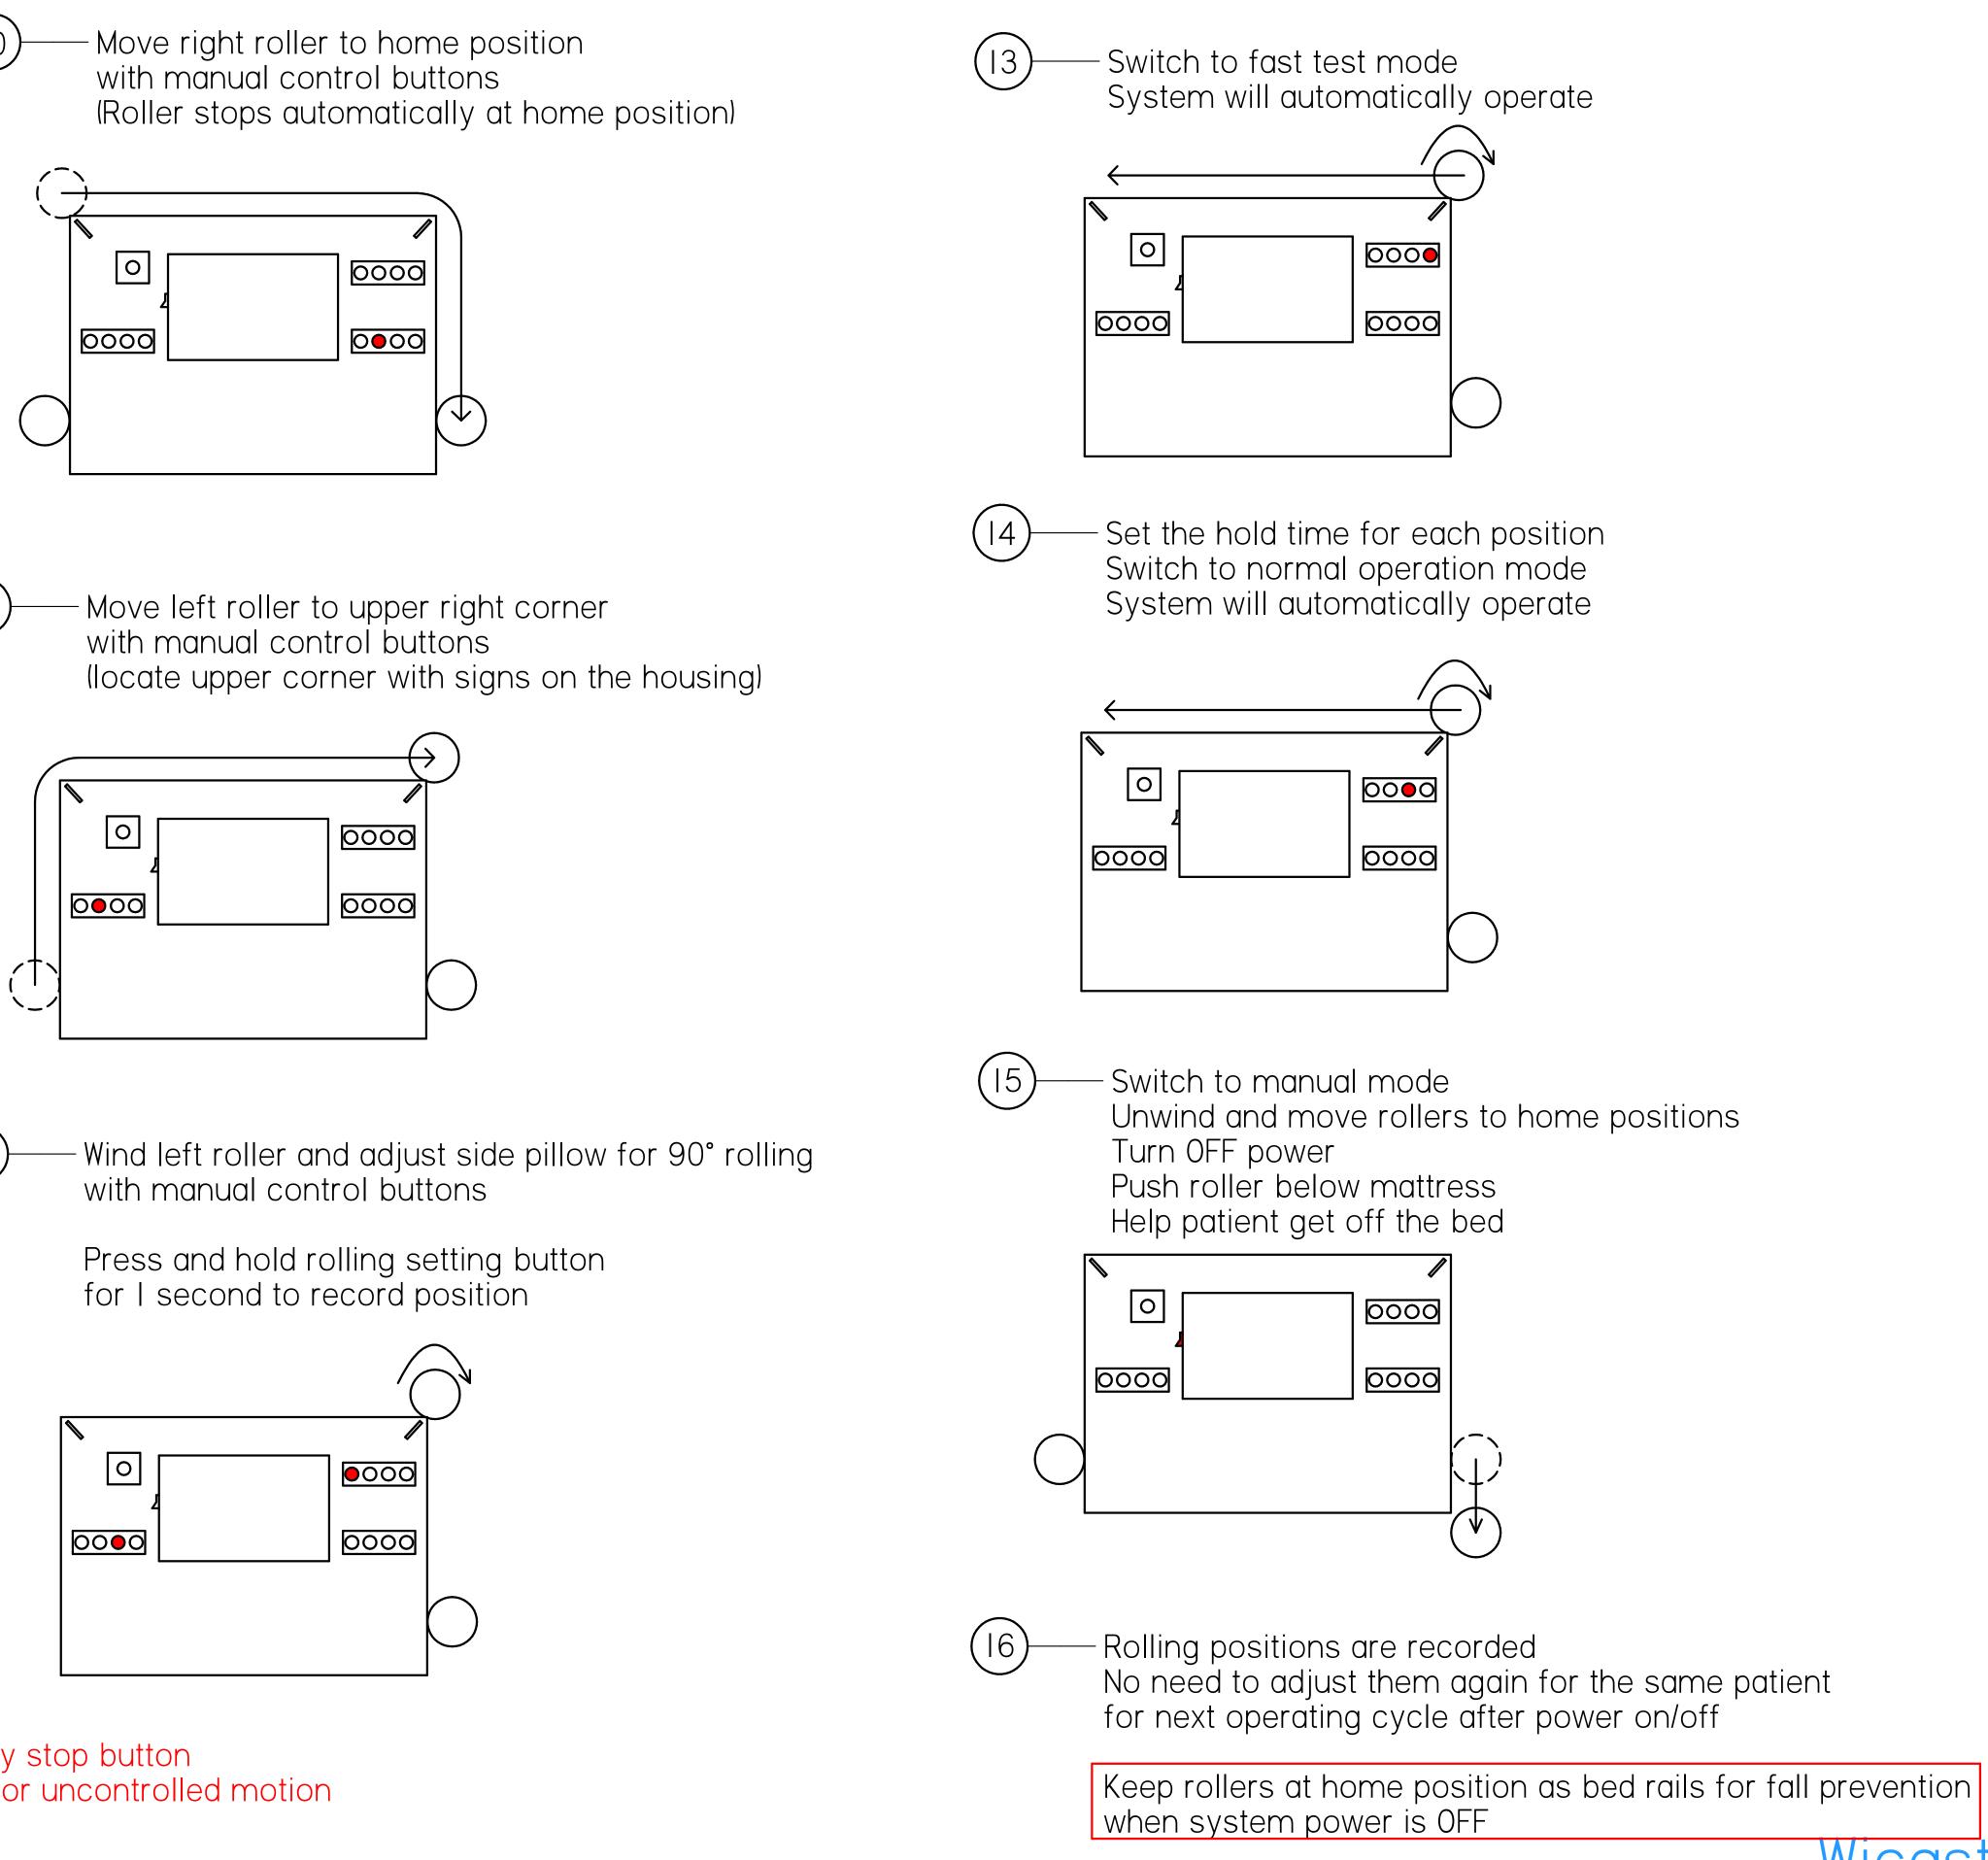

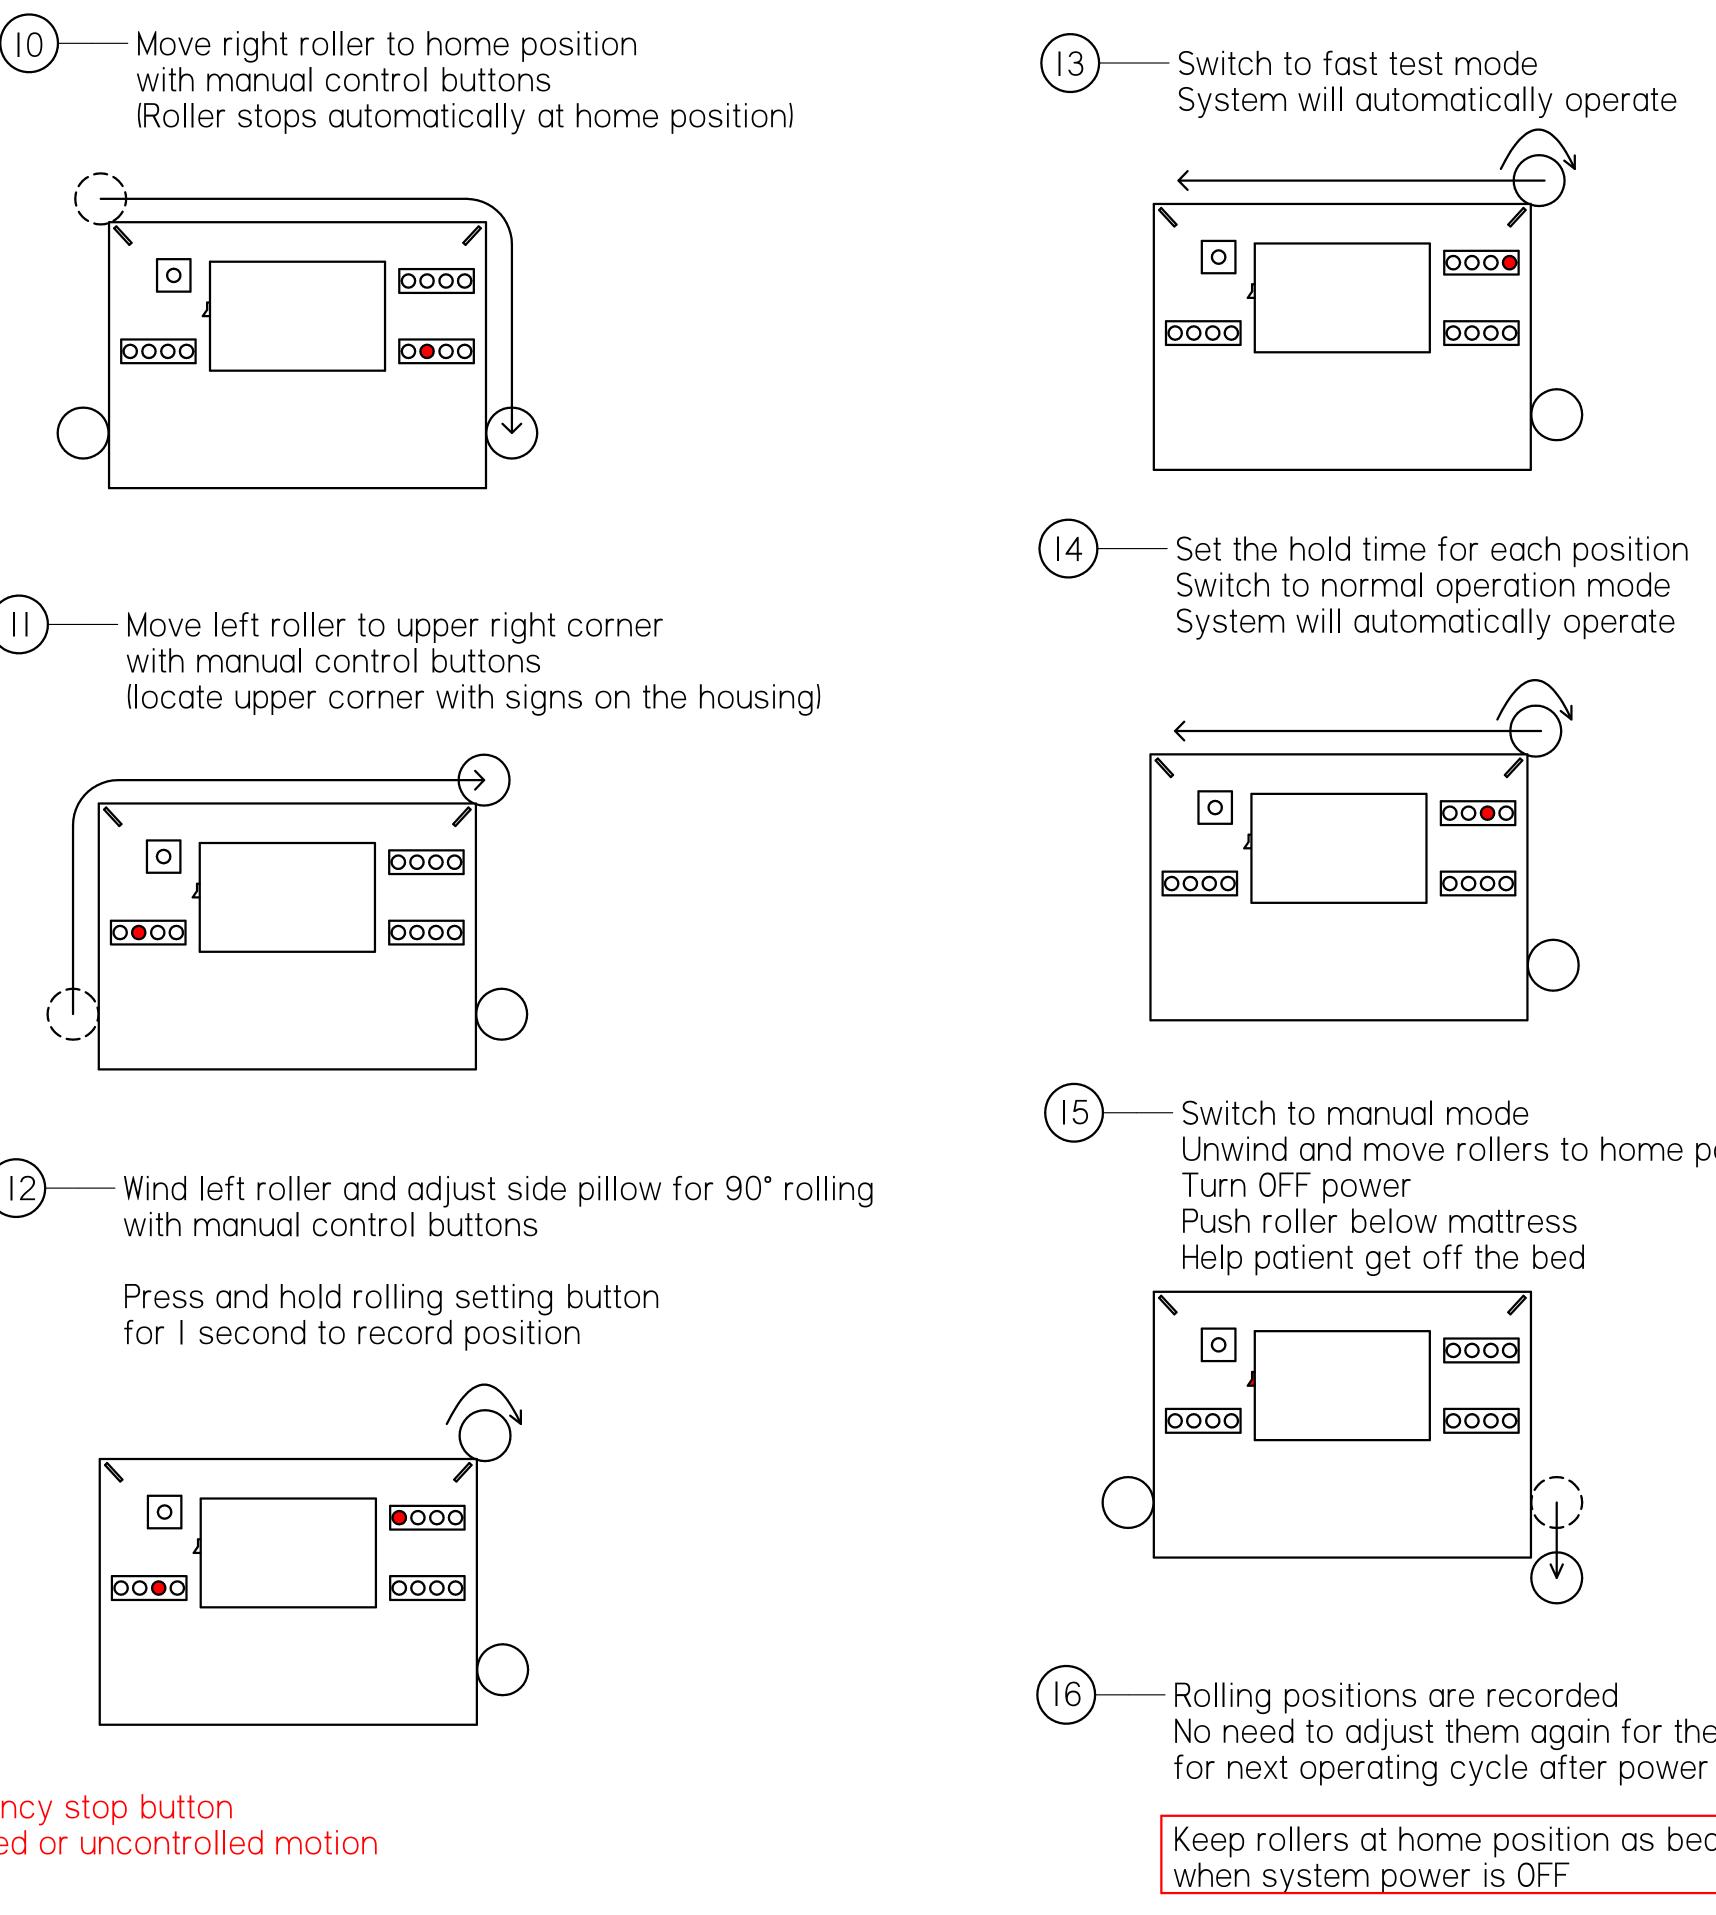



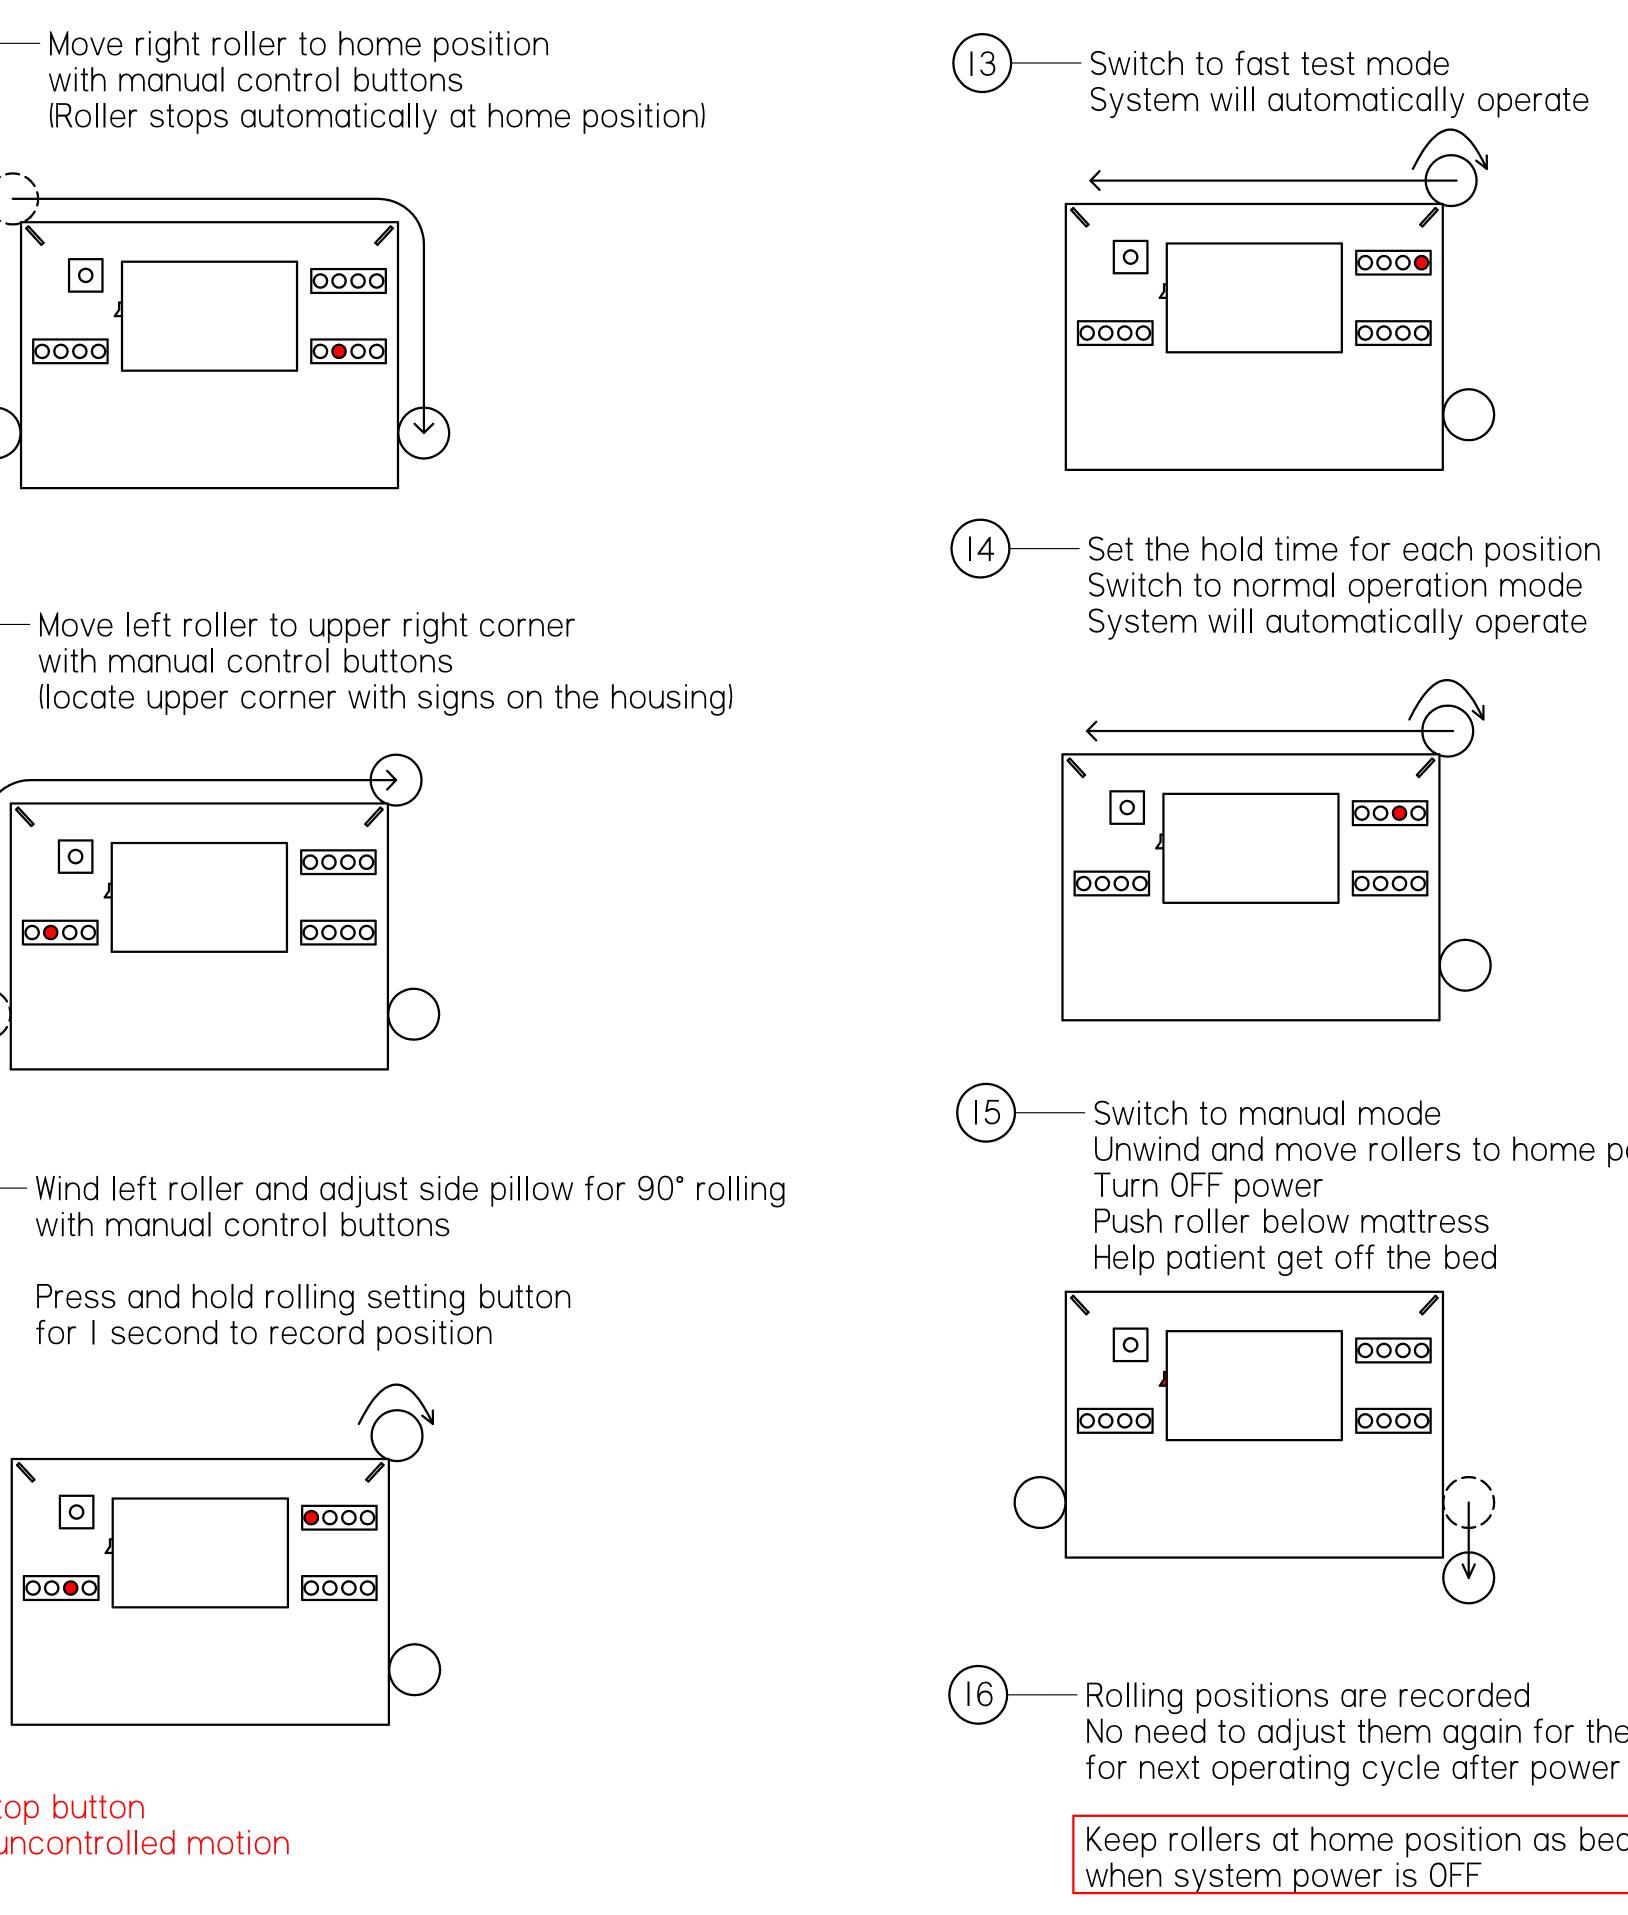



Push emergency stop button for unexpected or uncontrolled motion

Item

Rolling Sheet

Head/stop pillow cover


Mattress cover sheet

Guide plate


Home switch

Roller clamp

Roller sensor wire

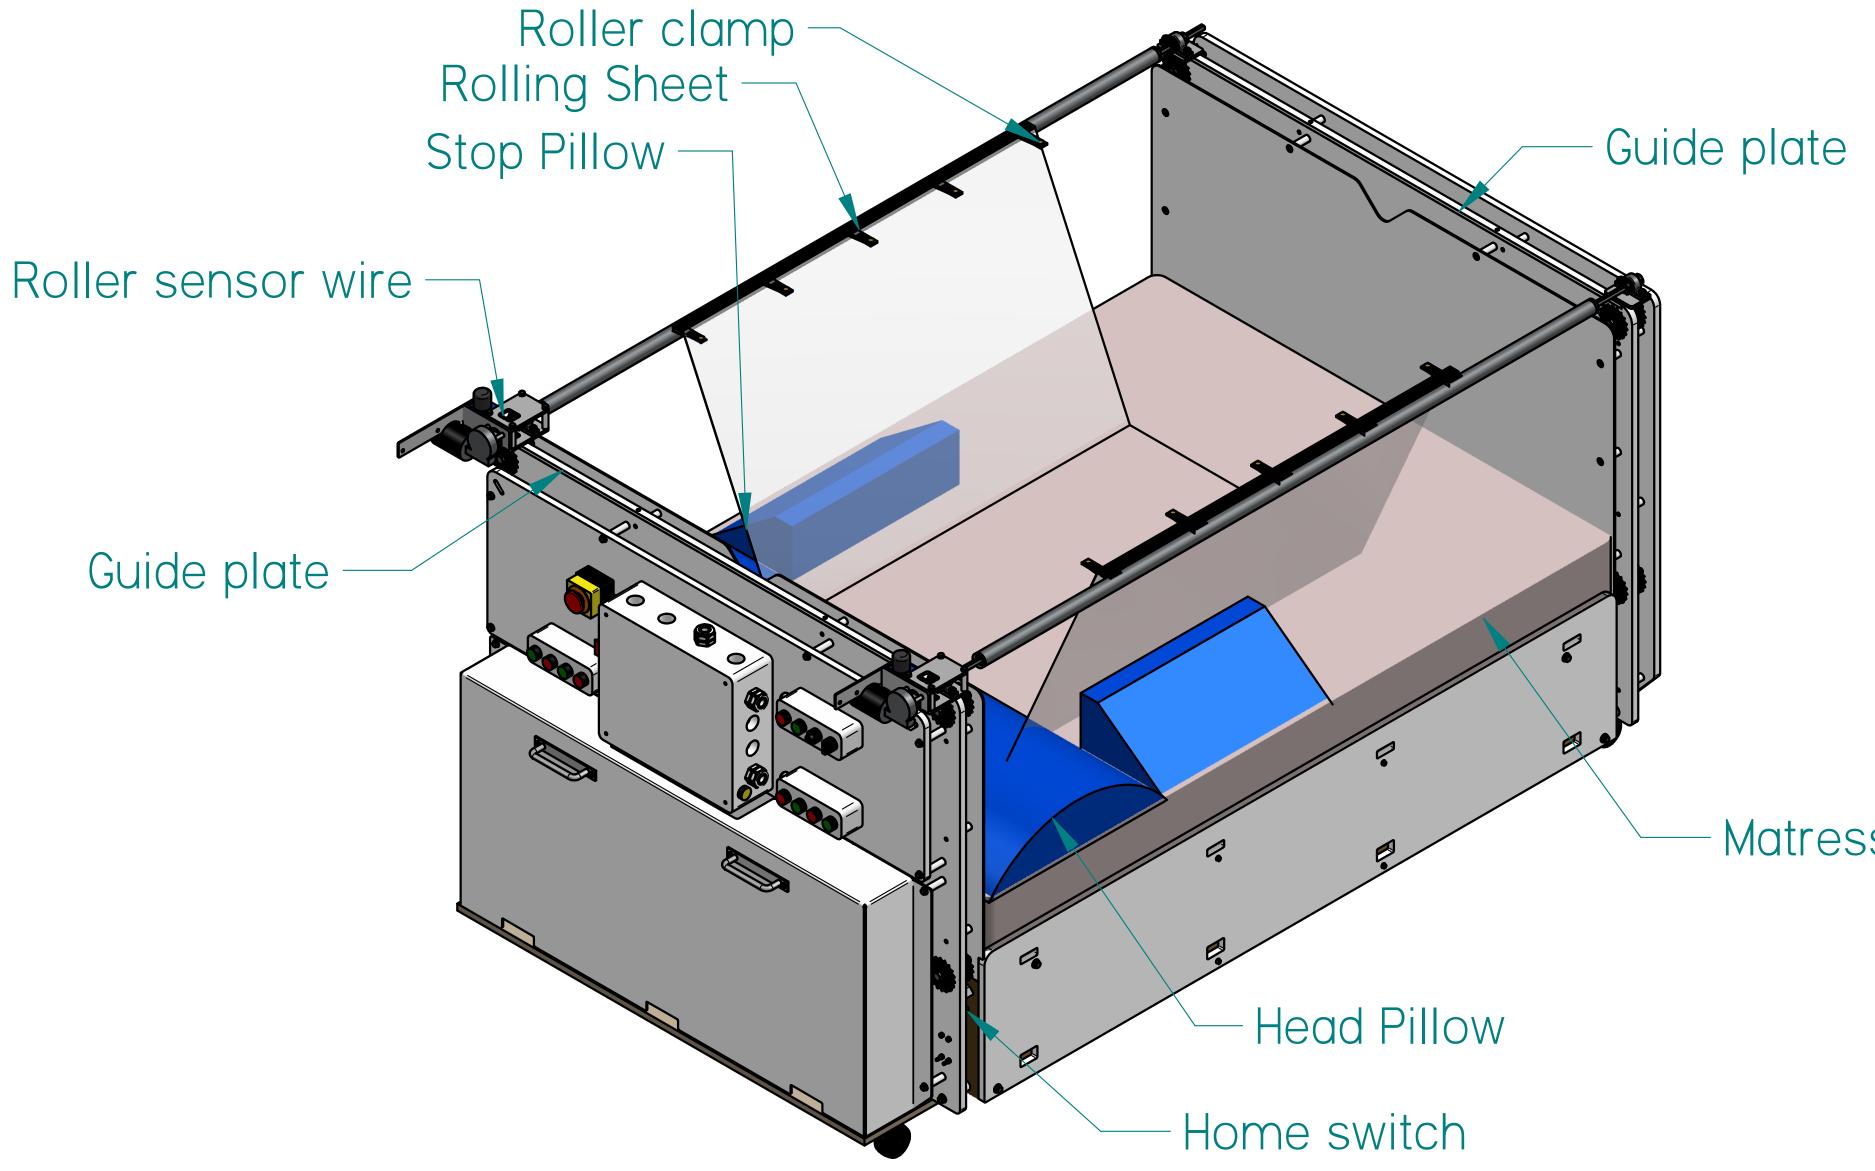

Service and Maintenance			
	Quantity	Service	
		Wash if dirty, replace if broken	
	2	Wash if dirty, replace if broken	
		Wash if dirty, replace if broken	
	2	Check/add grease	
	2	Check manually for clicking sound an	
	10	Replace if broken	
	2	Replace if broken	

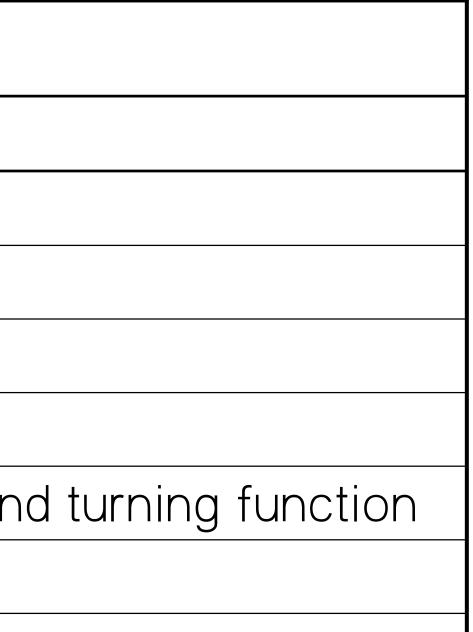

Matress cover sheet

Symptom

No response when power is on

No response from manual butto for linear motion


No response from manual butto for rolling motion

Roller moves beyond home position and hits hard stop

Chain gets off idler sprocket

Unexpected or nonsynchronous motion

Troubleshoot Cause and solution I. Emergency stop button should be disengaged 2. Rolling sensor wire is broken tons I. Both rollers should have the trigger plate at Turn off power before manually pulling/pushing	
I. Emergency stop button should be disenga 2. Rolling sensor wire is broken ons I. Both rollers should have the trigger plate a	
2. Rolling sensor wire is broken ons I. Both rollers should have the trigger plate a	
	ged
2. Reset circuit breaker	
ons I. Rolling hits the max or min limit 2. Rolling sensor wire is broken	
I. Home switch is broken 2. Linear motion encoder is broken	
Tensioner need more tension	
us Mechanical coupling/mounting failure	

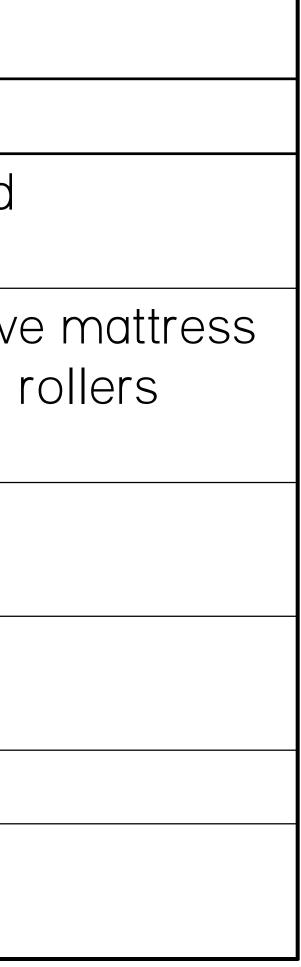

I. Rolling bed must be connected to proper electrical outlet with the correct electrical outlet with the correct electrical supply.

2. Proper grounding must be ensured to reduce the risk of shock and fire. DO NOT CUT OR REMOVE THE GROUNDING PRONG. If you do not have a three-prong electric receptacle outlet in the wall, have a certified electrician install the proper receptacle. The wall receptacle MUST be properly grounded.

3. Do not operate rolling bed if power cord is frayed or otherwise damaged. Avoid using it if there are any cracks or abrasion damage along the length, plug connector or if the unit malfunctions or is damaged in any manner. Contact an authorized service technician for examination, repairs or adjustments.

4. Always unplug the rolling bed before servicing it or moving it.

Safety Information